

Rugged Buoy Lift Strap



Use this kit to replace the lift strap on your Rugged Buoy.

Lift strap

• Aluminum lift strap bolts

Tools & Supplies (Not Included)

3/4″ wrench

Installing Lift Strap



Replace lift strap.



Remove the 2 bolts from the base of the well.



Lift the old strap and bolts away from the base of the buoy.







Test that the strap is secure.



Use only the hardware provided when replacing parts. Never use steel bolts because they can cause galvanic corrosion.

Learn More

View complete instructions for your Rugged Buoy in the product manual. Download it from <u>www.in-situ.com</u>.