

## **PERFORM BEFORE EACH INSTALLATION & STORAGE**

### Checking the fluid in the engine

The fluid level in the motor should be checked before installing the pump.

1. Place the pump and motor in a vertical position so that the pressure port is facing down (i.e. the bottom of the motor is on top) and remove the filling screw.
2. If the water is up to the edge of the threaded hole, no refilling is necessary. If not, fill the engine with demineralized water. To allow all the air to escape, put your finger in the outlet port of the pump and lift the shaft a few times.
3. Replace the filling screw and tighten it. The pump is now ready for use.

