



Use this kit to replace the mooring hardware on your Rugged Buoy.

### Contents

- Seizing wires
- 4 small shackles
- Large anchor shackle
- 4 chains
- Cotter pin

### Tools & Supplies (Not Included)


- 3/4" wrench
- Pliers
- Wire cutters

## Installing Mooring Hardware

### 1 Replace mooring hardware.



Remove cotter pin from anchor shackle. Unscrew bolt. Remove anchor or mooring point.

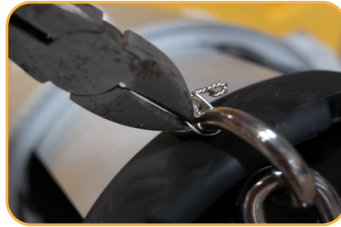

Cut wires on the 4 small shackles. Remove bolts. Release old hardware from well.



Align new mooring hardware with bolt holes. Bolt new hardware into place.



Install seizing wire to secure small shackle bolts. Attach anchor or mooring point. Insert cotter pin in anchor shackle.



When replacing parts, use only the hardware provided to prevent galvanic corrosion.

### Learn More

View complete instructions for your Rugged Buoy in the product manual. Download it from [www.in-situ.com](http://www.in-situ.com).