

RDO[®] Classic Sensor Cap Replacement Kit

Part Number 0084230

Kit Contents

- RDO Sensor Cap
- O-rings (2)
- Instruction sheet

Replace the Sensor Cap

The sensor cap has a 1-year typical life, and a 15-month total life, after the instrument takes its first reading. Install the cap by the date printed on the package. Replacement caps are available from In-Situ Inc., or from your authorized In-Situ distributor.

✓ Do not allow moisture, including atmospheric humidity, inside the cap. Keep the cap in its sealed package until you are ready to install it. Install promptly. Make sure that O-ring grooves are dry and that the O-rings are not rolled or pinched inside the cap.

1. Remove the from the instrument.
2. Without twisting, pull the used sensor cap off of the sensor.
3. Remove the existing O-rings from the sensor.
4. Place the O-rings on the sensor.

5. Remove the new cap from its sealed package.
6. Align the arrow on the cap with the index mark on the sensor and press it firmly, without twisting, until it seals over the probe body. Make sure that the O-rings are not pinched or rolled between the cap and sensor.
7. Perform a 2-point calibration, if desired, as described in the instrument manual.



- | | |
|---|-----------------------------------|
| 1 | Install 2 O-rings. |
| 2 | Replace cap in a dry environment. |