



Use this kit to replace the well lock bolts on your Rugged Buoy.

Contents

- Aluminum well lock bolts (4) with lanyards

Tools & Supplies (Not Included)


- 3/4" wrench

Installing Well Lock Bolts

1 Replace well lock bolts.



Remove the 4 bolts and lanyards from the adjustment well.

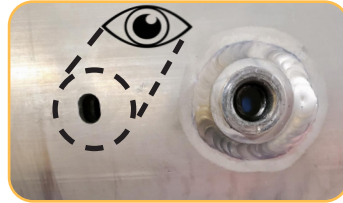

Use sight holes to align bolt holes.



Hold the lanyard in place and install new bolts.



Tighten new bolts in place.



Only use the hardware provided when replacing parts. Never use steel bolts because they can cause galvanic corrosion.

Learn More

View complete instructions for your Rugged Buoy in the product manual. Download it from www.in-situ.com.